 
 
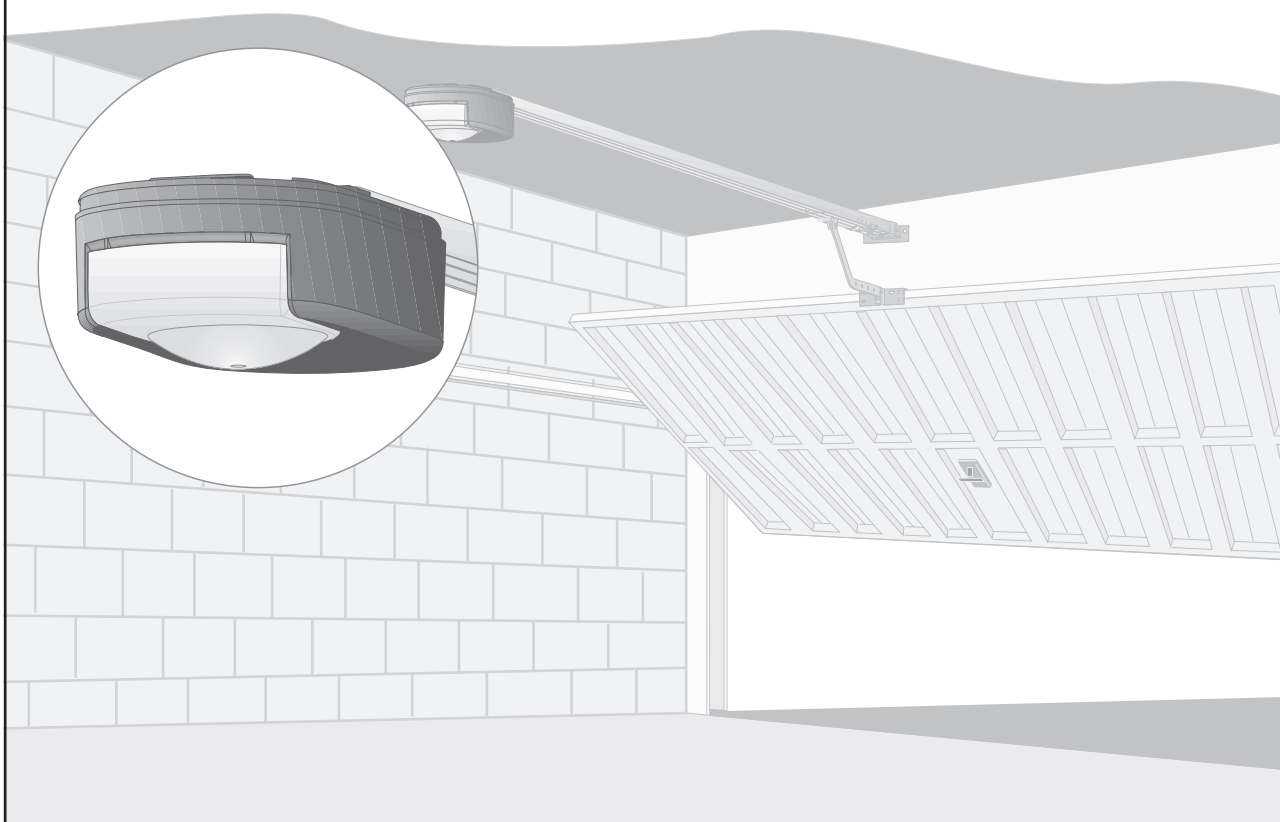 


Dexxo Optimo RTS

- FR** Manuel d'installation - Illustrations
- DE** Gebrauchsanleitung - Abbildungen
- IT** Manuale d'installazione - Illustrazioni
- NL** Installatiegids - Illustraties

 
 
- EN** Installation manual - Illustrations
- ES** Manual de instalación - Ilustraciones
- PT** Manual de instalação - Ilustrações
- EL** Εγχειρίδιο εγκατάστασης - Εικόνες

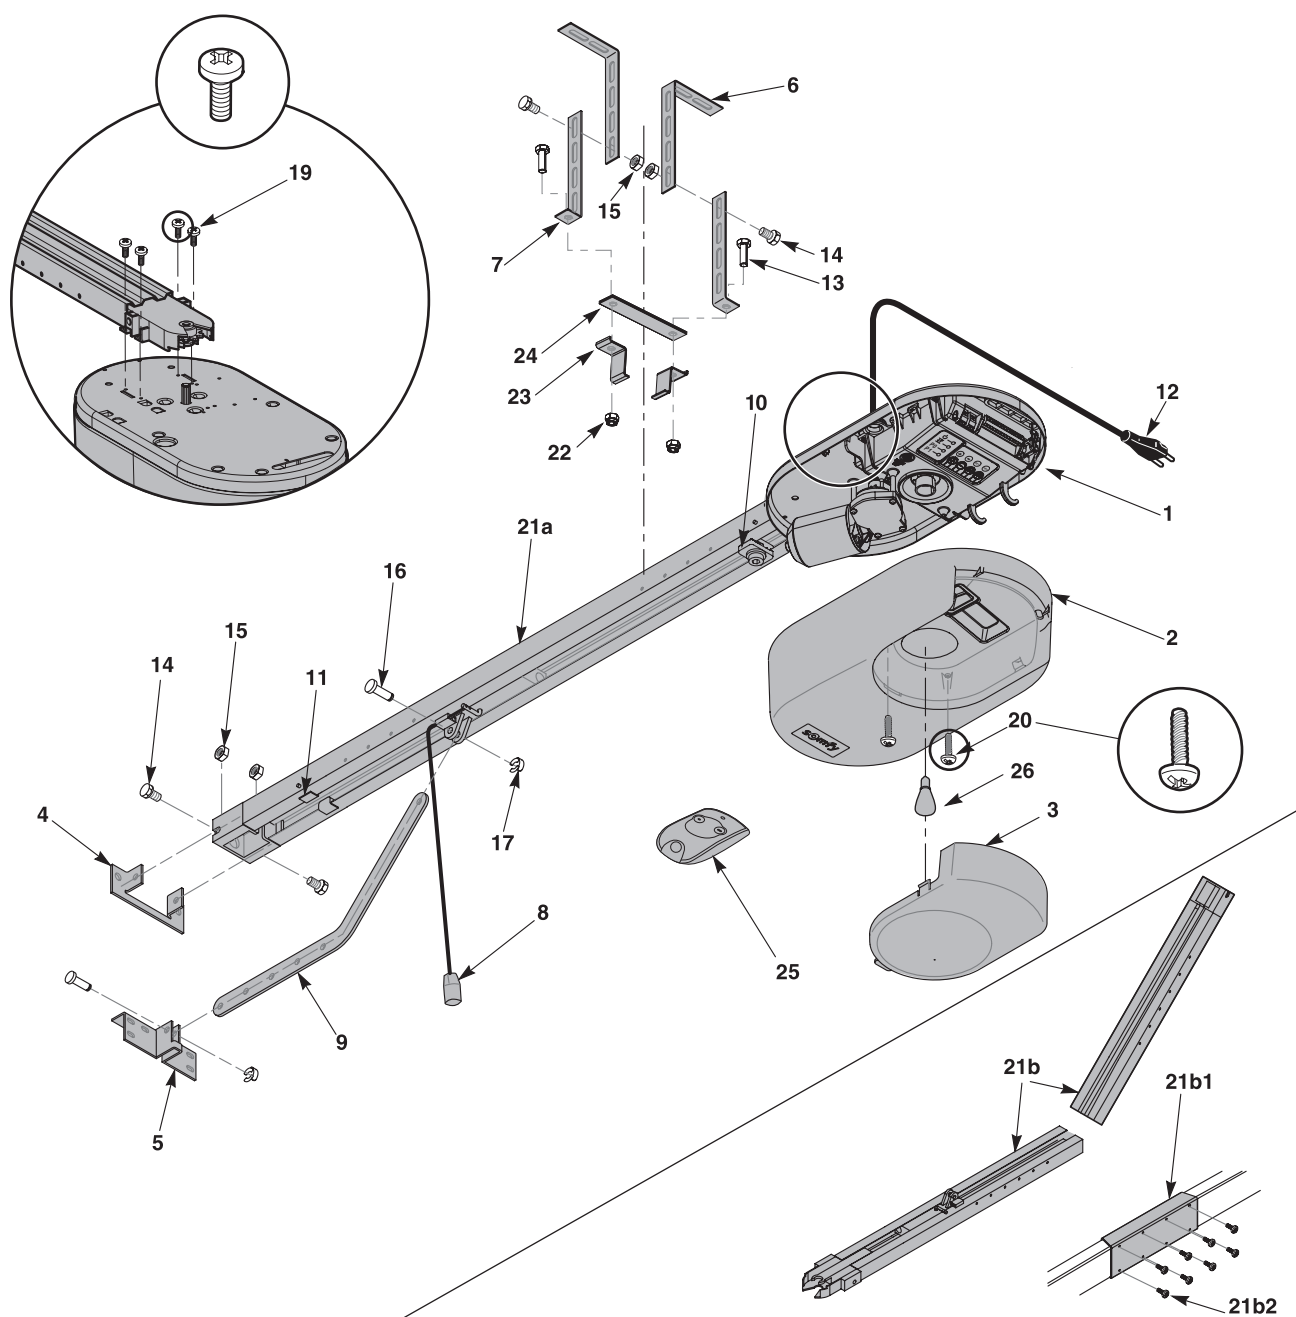


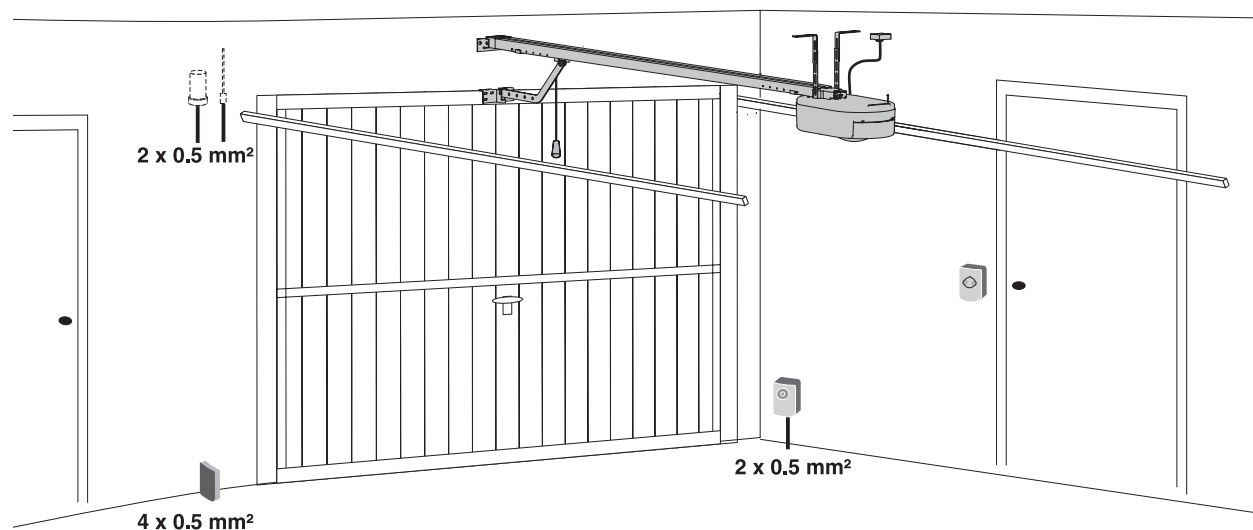


2


A

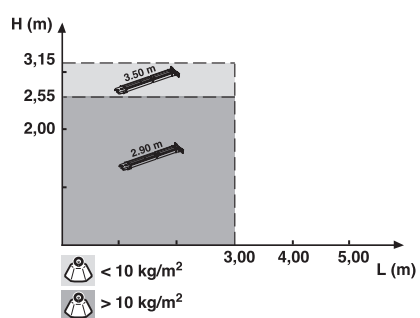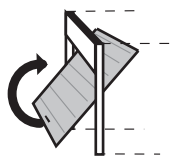





B

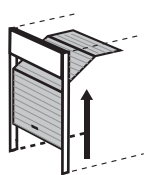  

REF : 9009390


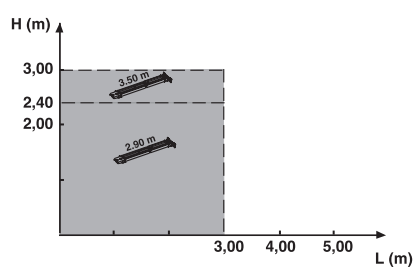 


C

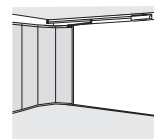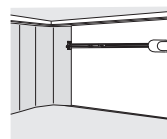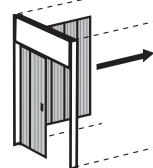    

REF : 9014481

  
+





REF : 9014482



 
3

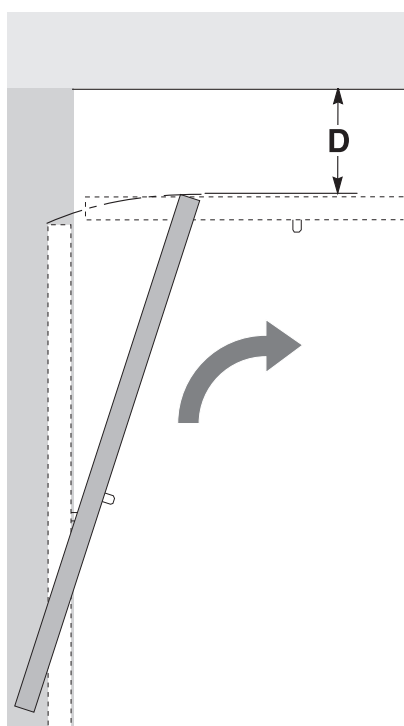


$35 < D < 200$

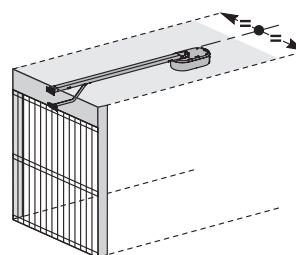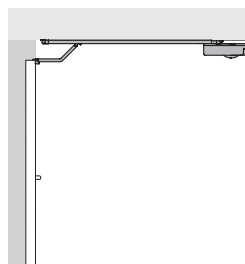  


$D > 200$

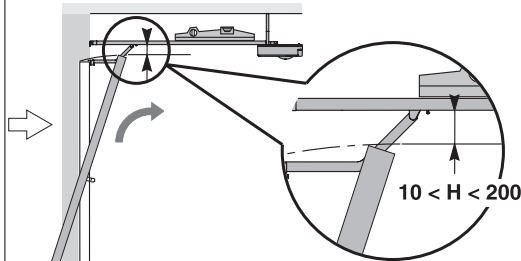 


$10 < H < 200$

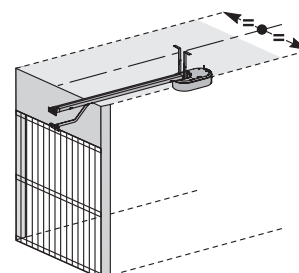 

4

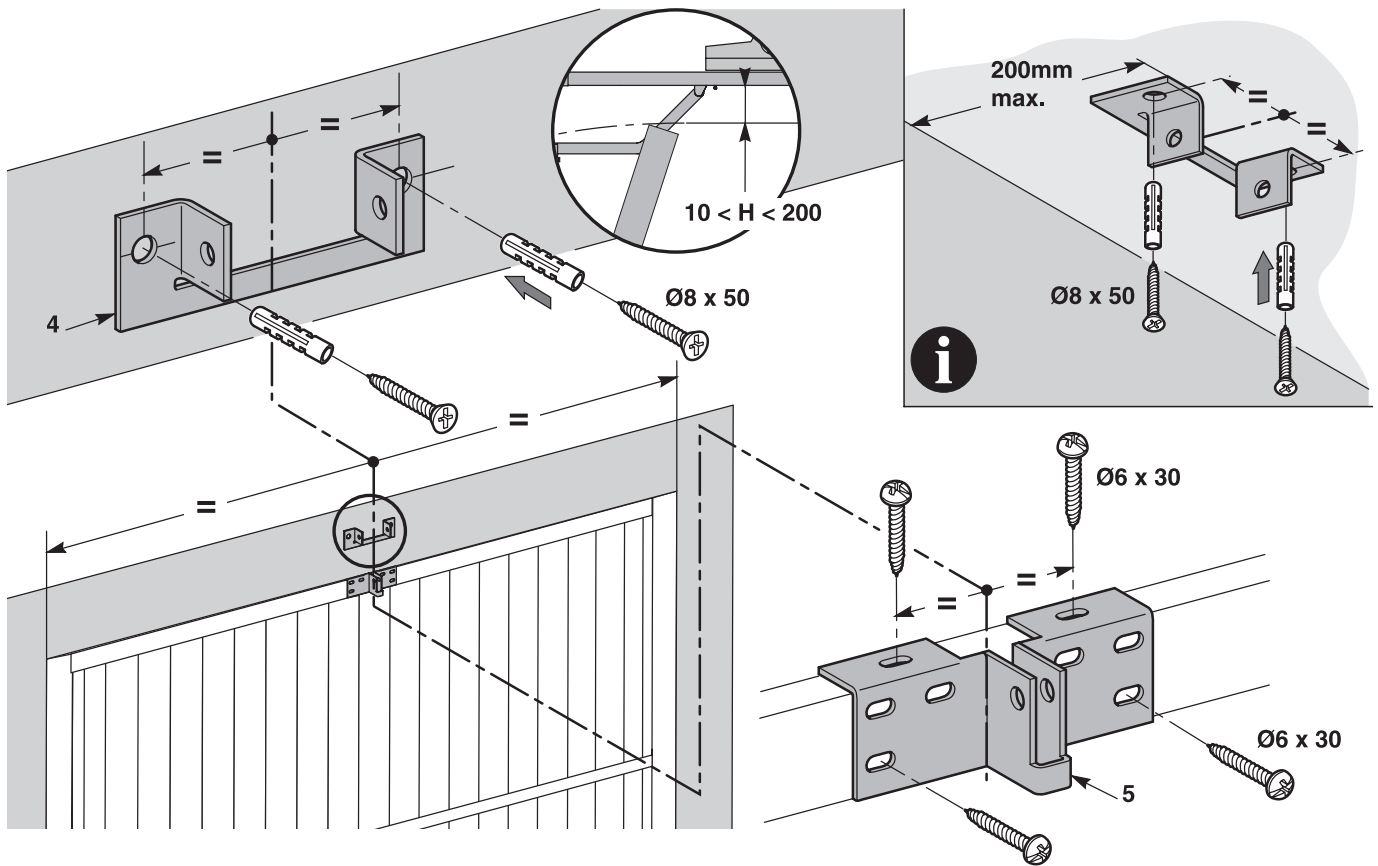 


5


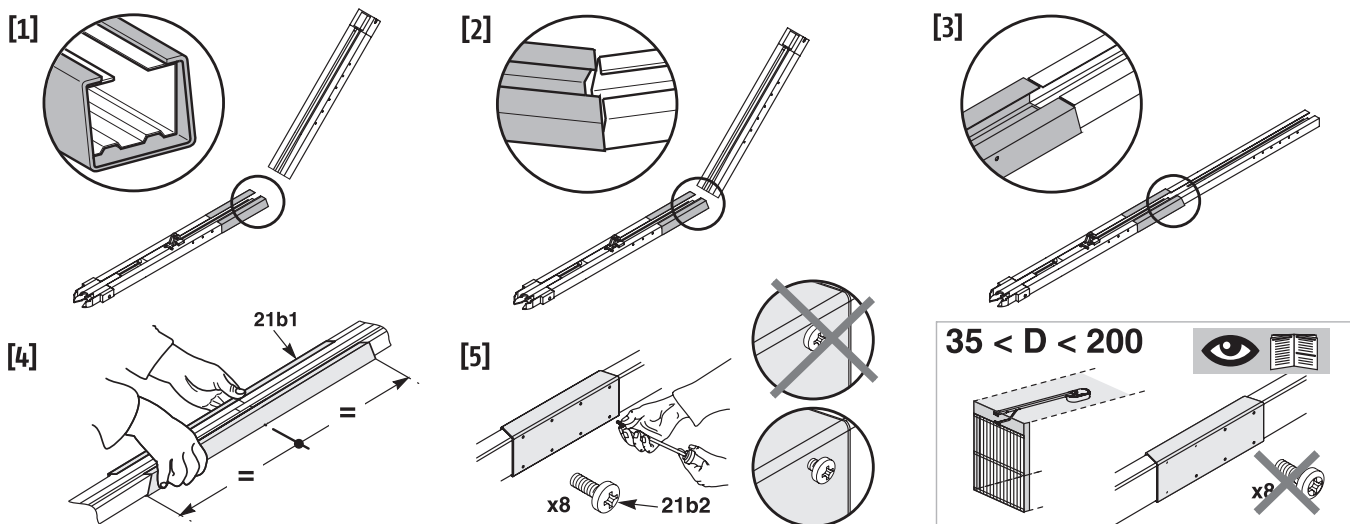 


6



 
[1]

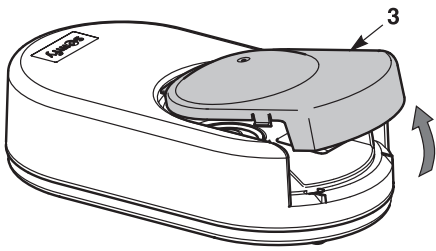




[2]










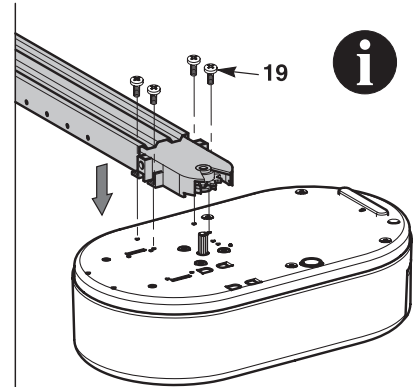 
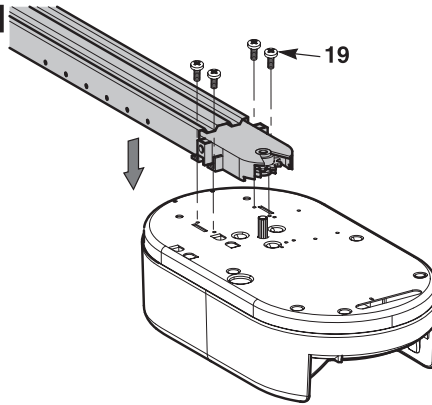 


7

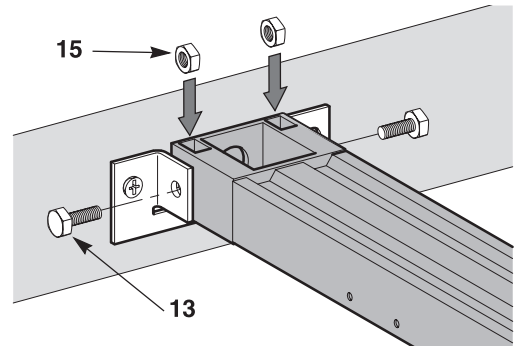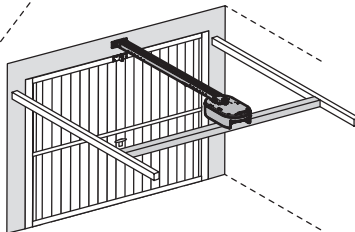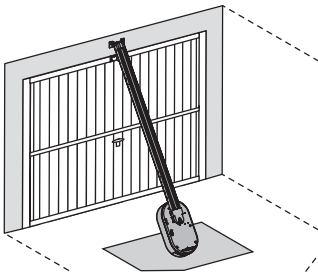   


8

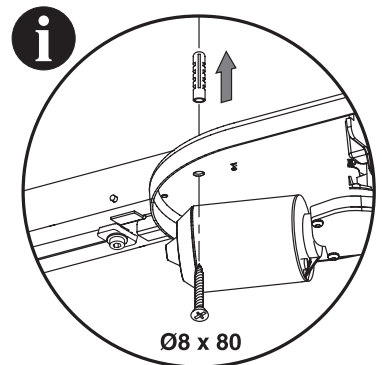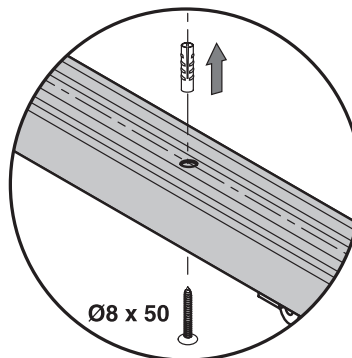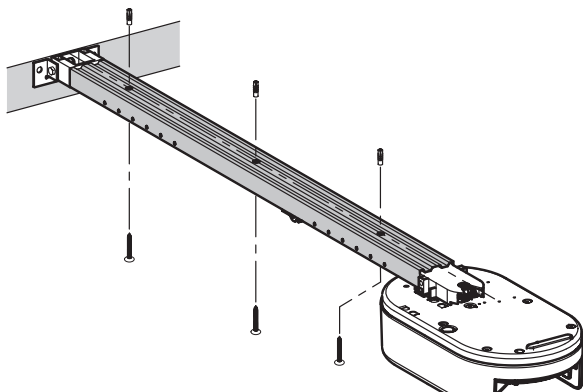   

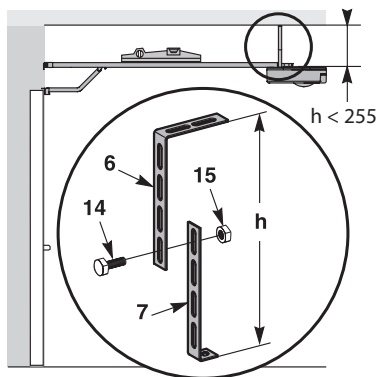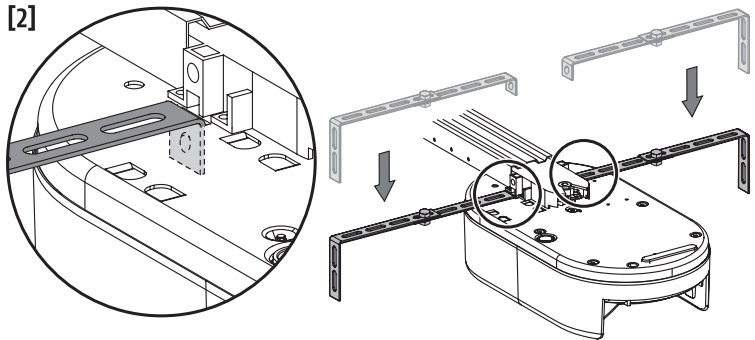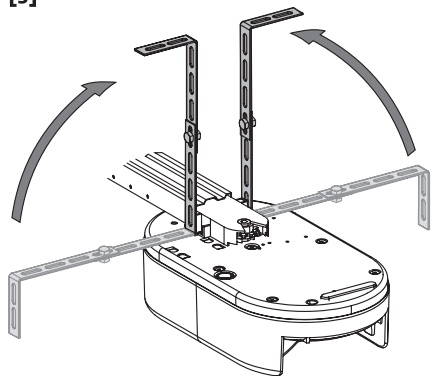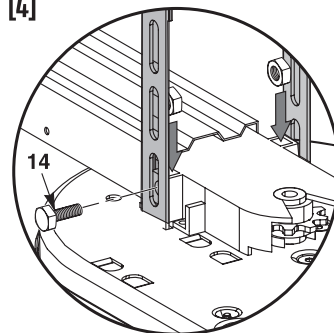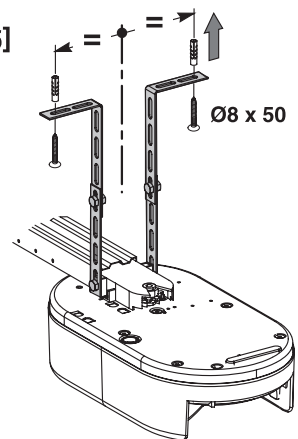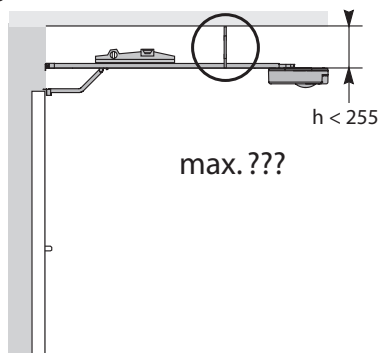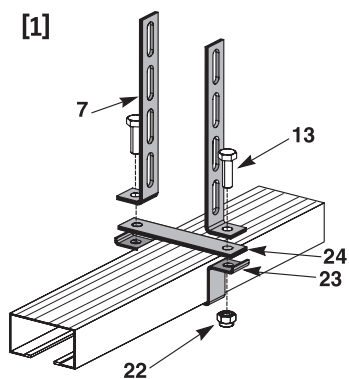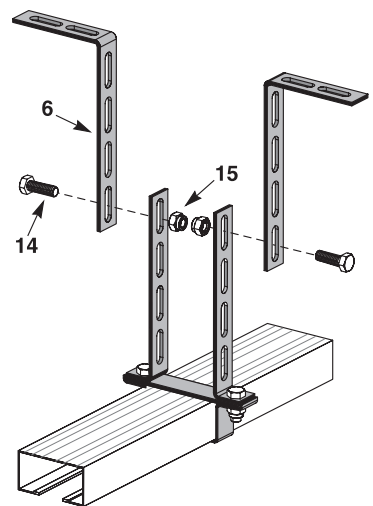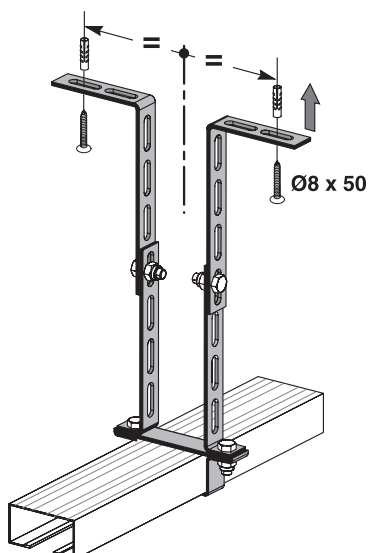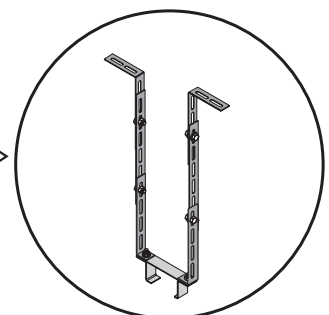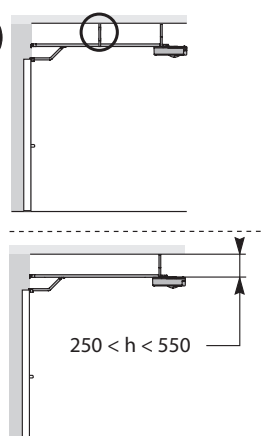           
a**[1]****[2]****[3]****[4]****[5]****b****[1]****[2]****[3]****i**

REF : 9014462

 
10

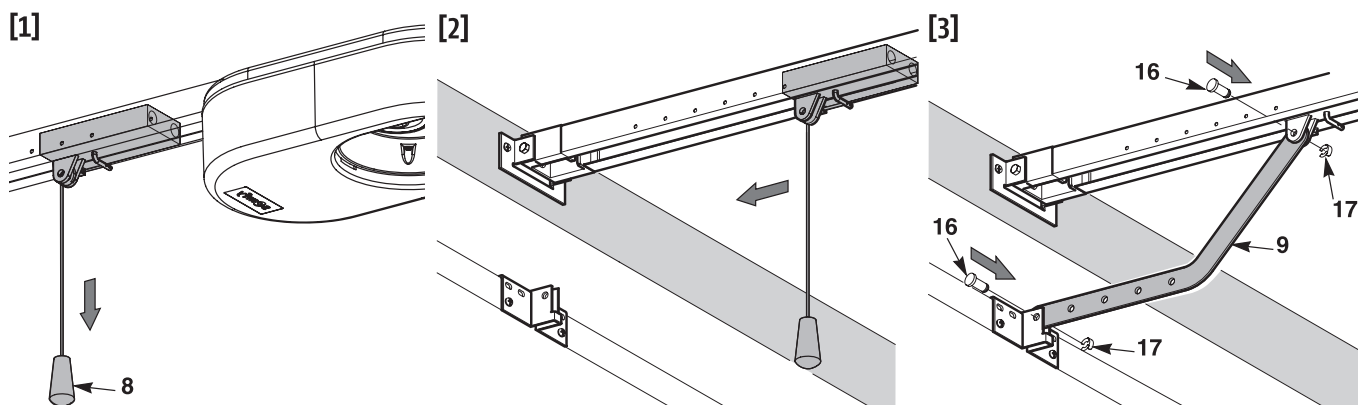


11

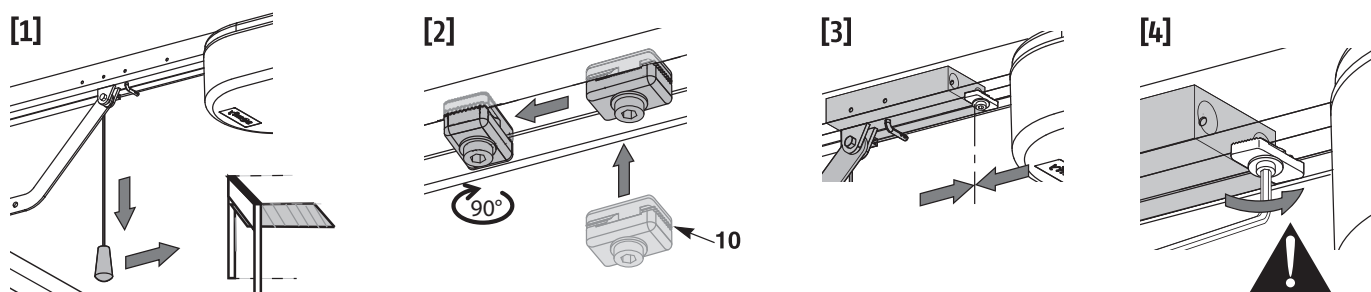 


12

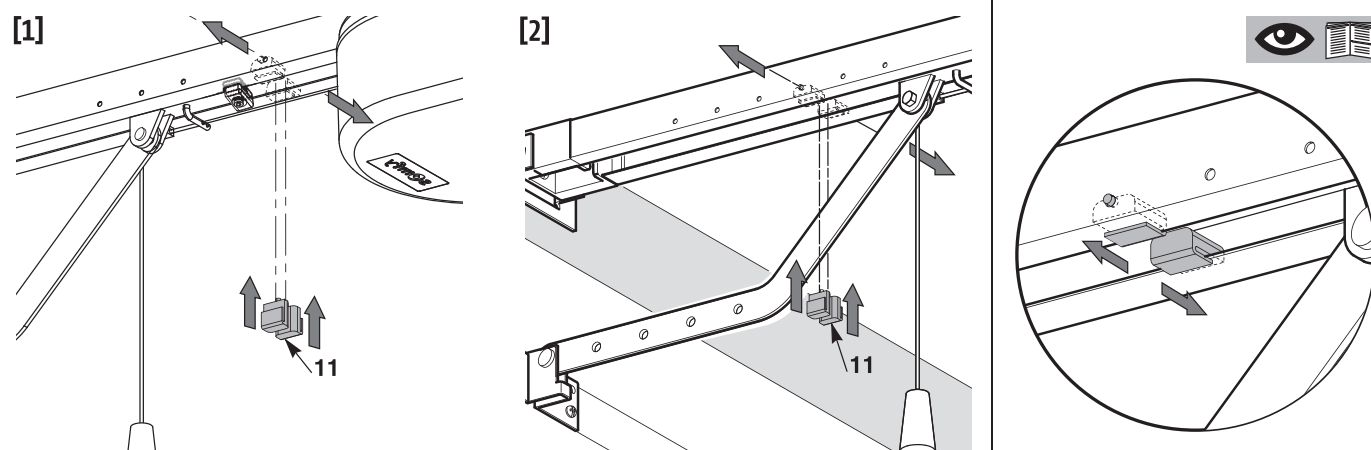 


13

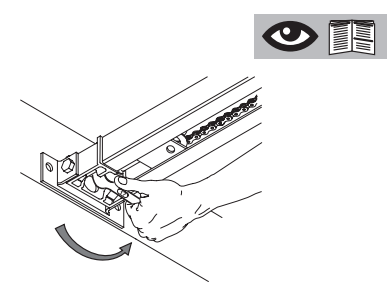 


14

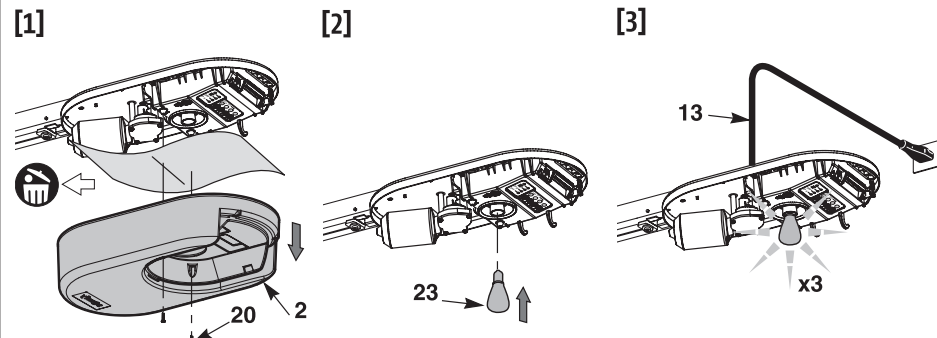 


15

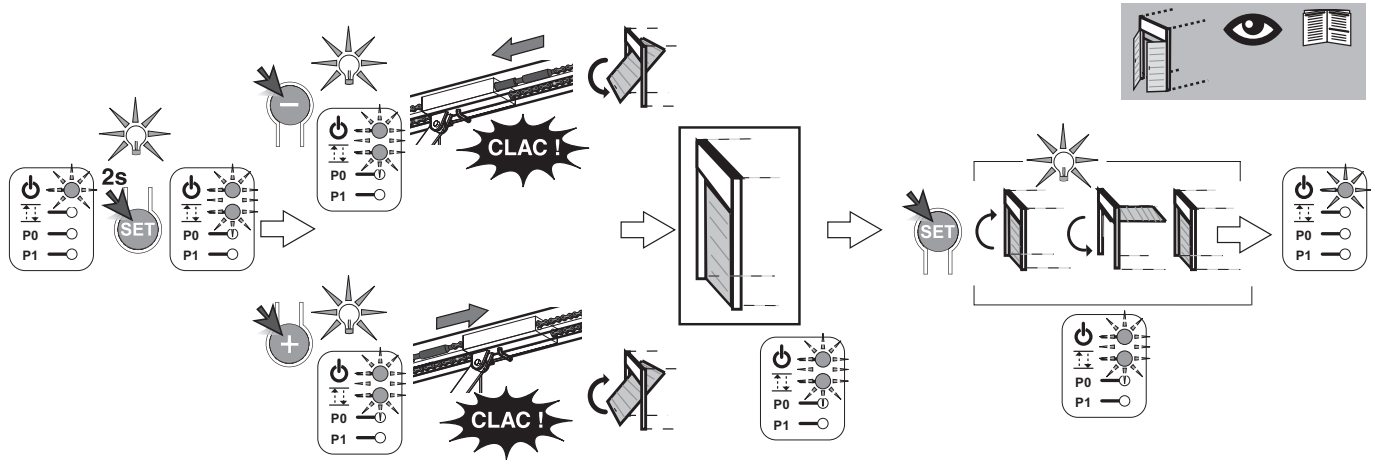 


16

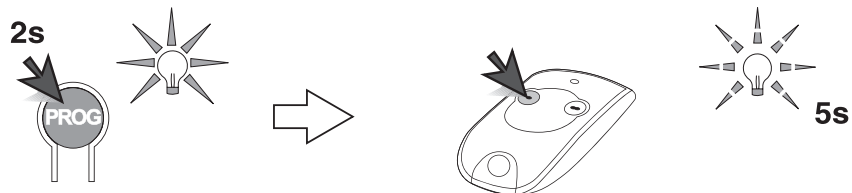 


17



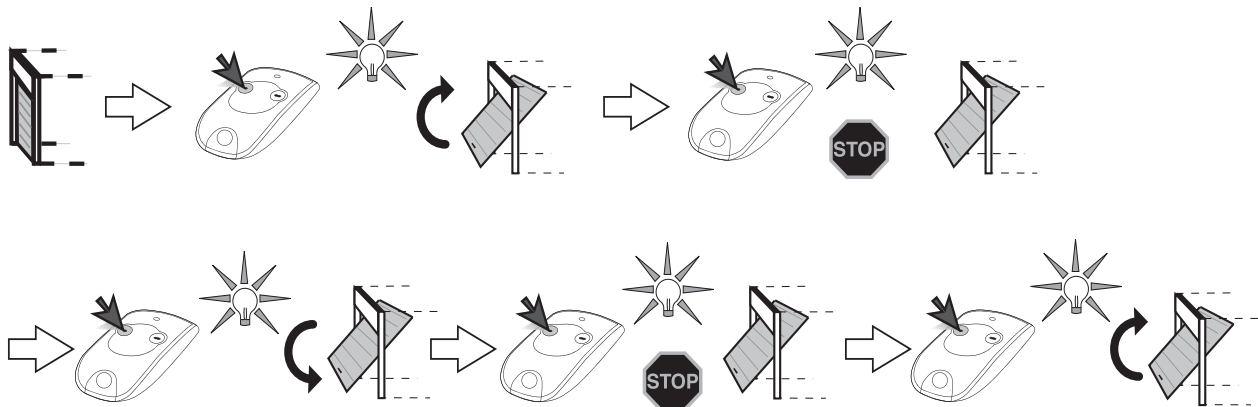 


18

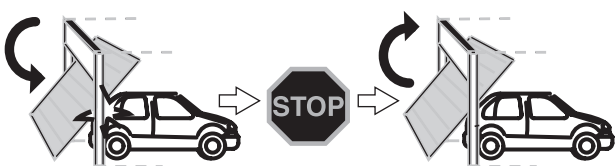 

19

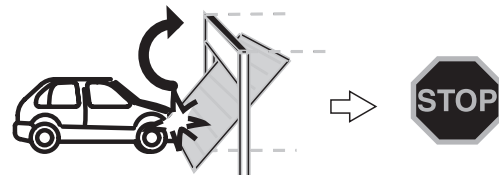 

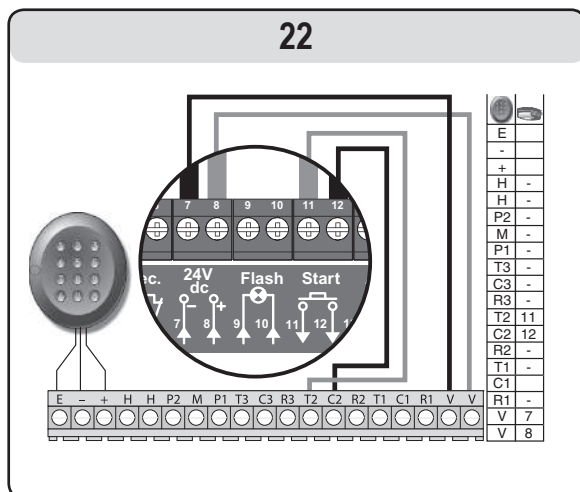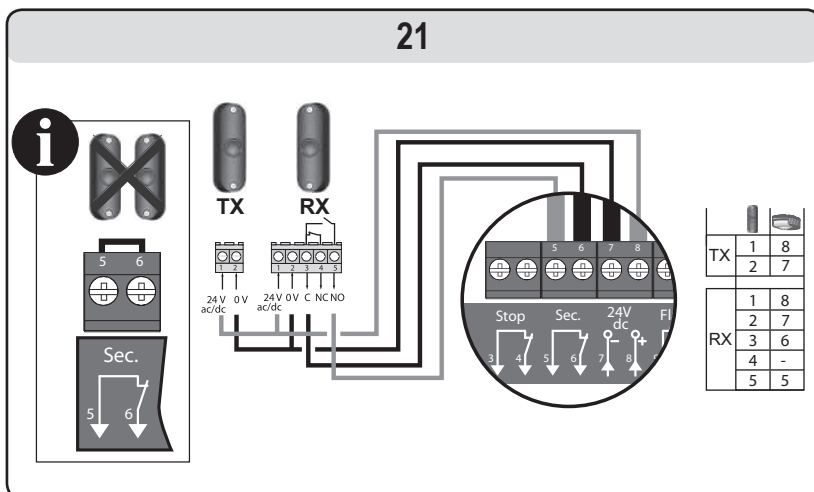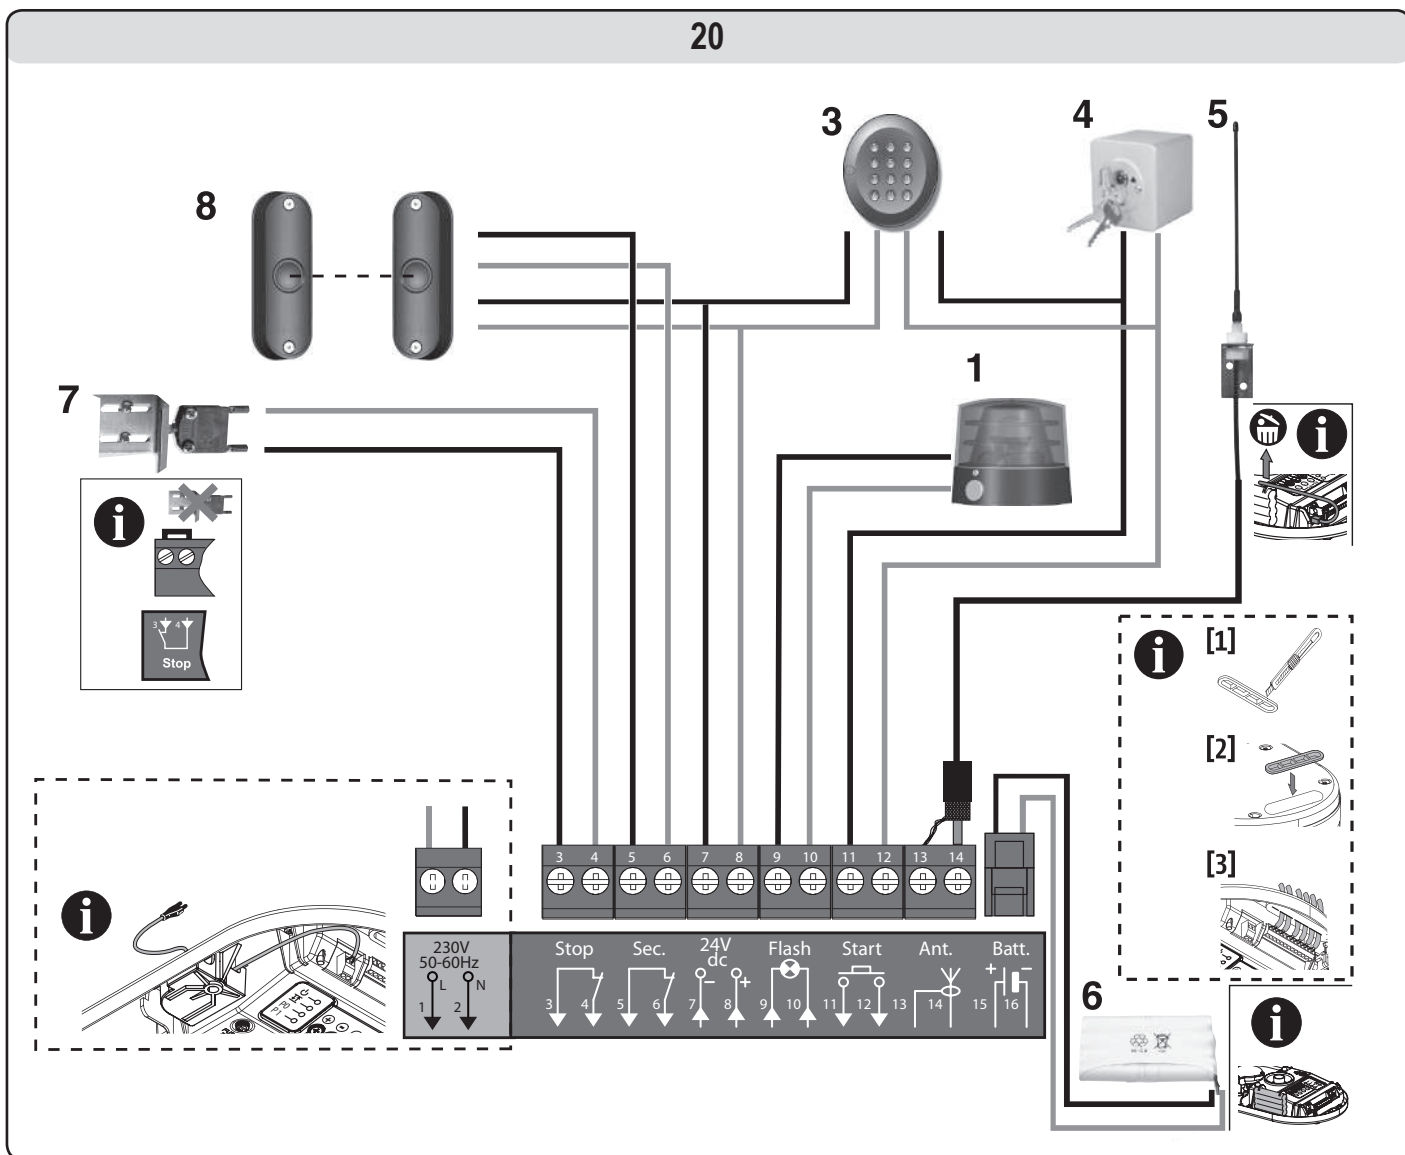   

The figure shows a step-by-step process:

- Initial State:** A control panel with a power button, a range selector set to 0, and two indicator lights labeled P0 and P1.
- Step 1:** An arrow points to the first of three identical engine units below the panel.
- Step 2:** The range selector is moved to 1. A "SET" button is pressed. The second engine unit is now active.
- Step 3:** The range selector is moved to 2. Another "SET" button is pressed. The third engine unit is now active.
- Step 4:** The range selector is moved to 3. A "+" button is pressed. All three engine units are now active.
- Step 5:** The range selector is moved back to 0. A "SET" button is pressed. This indicates that having 3 engines is the optimal configuration.